



Extendable Duster

2011.227

Extendable handle with a microfiber duster. Helps reach ceiling corners and fans easily. (Image to left)



Extendable Scrubber

2011.228

Extendable arm up to 40" with non-scratch scouring detachable pad. Helps with long reach cleaning. (Image to left)



No-Touch Kitchen System Soap

2011.229

Soap dispenser with no-touch sensor runs off 3 AA batteries. Great for cleaning dishes, surfaces and hands. (Image to left)